

**English**

Before operating the system, please read this manual thoroughly and retain it for future reference.

**WARNING**  
To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. To reduce the risk of electric shock, do not open the cabinet. Refer servicing to qualified personnel only.

To reduce the risk of fire, do not cover the ventilation opening of the apparatus with newspapers.

To reduce the risk of fire or electric shock, do not place the naked flame sources such as lighted candles on the apparatus, such as a cabinet.

To reduce the risk of fire or electric shock, do not place the AC power adaptor in a place subject to liquid or moisture. Furthermore, do not place liquid-filled vessels, such as vases, etc., on the AC power adaptor.

As the main plug of AC power adaptor is used to disconnect the AC power adaptor from the mains, connect it to an easily accessible location.

Should you notice an abnormality in it, disconnect it from the AC outlet immediately.

The system is not disconnected from the mains as long as it is connected to the AC outlet, even if the system itself has been turned off.

**CAUTION**  
You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this product.

The validity of the CE marking is restricted to only those countries where it is legally enforced, mainly in the countries EEA (European Economic Area).

**Disposal of Old Electrical & Electronic Equipment (Applicable in the European Union and other European countries with separate collection systems)**

This product is not covered through the satellite speaker connected to the Rich Jack.

This symbol on the product or its packaging indicates that this product shall not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment.

By ensuring this product is disposed of correctly, you will help prevent potential negative environmental and human health, which could otherwise result from inappropriate handling of this product.

The recycling of materials will help to conserve natural resources. For more detailed information about recycling of this product, please contact your local Civic Office, your household waste disposal service or the shop where you purchased the accessories.

**Notice for customers: the following information is only applicable to equipment sold in countries applying EU directives.**

The manufacturer of this product is Sony Corporation, 1-7-1 Konan Minato-ku Tokyo, 108-0075 Japan. The Authorized Representative for EMC and product safety is Sony Deutschland GmbH, Heddlinger Strasse 61, 70327 Stuttgart, Germany.

For any service or guarantee matters please refer to the address given in separate service or guarantee documents.

**Precautions**

**On safety**  
The nameplate is located on the bottom exterior of the subwoofer.

• Before operating the system, be sure the operating instructions of the system is identical to that of your local power supply.

**Where purchased Operation voltage**  
All countries/regions: 100 V ~ 240 V AC.

• Use only the supplied AC power adaptor.

**On operation**  
• Should any solid object or liquid fall into the system, have the system checked by qualified personnel before operating it any further.

• Although the satellite speakers are magnetically shielded, the subwoofer is not, so do not leave recorded tapes, watches, personal credit cards, or floppy disks with magnetic coding in front of the system for an extended period of time.

**On placement**  
• Do not set the system in an inclined position.

• Do not place the system on rough ground, especially the subwoofer since the speaker grille is on the bottom exterior.

• Do not leave the system in a location where it may be exposed to direct sunlight, excessive dust, moisture, rain or mechanical shock.

**On cleaning**  
Do not use alcohol, benzine or thinner to clean the cabinet.

**If the TV picture or monitor display is magnetically distorted**  
Although the satellite speakers are magnetically shielded, the subwoofer is not, and there may be cases that the picture on some TV sets/personal computers may become magnetically distorted. In such a case, turn off the power of the TV set/personal computer once, and after 15 to 30 minutes turn it on again. In the case of a personal computer, take appropriate measures such as data storage before turning off.

**On connection**  
When the system may be turned on automatically, the system may be turned on automatically by noise or an incoming call. This is caused by the system being magnetically shielded, the subwoofer is not, and there may be cases that the picture on some TV sets/personal computers may become magnetically distorted. In such a case, turn off the power of the TV set/personal computer once, and after 15 to 30 minutes turn it on again. In the case of a personal computer, take appropriate measures such as data storage before turning off.

**On connection**  
When the system may be turned on automatically, the system may be turned on automatically by noise or an incoming call. This is caused by the system being magnetically shielded, the subwoofer is not, and there may be cases that the picture on some TV sets/personal computers may become magnetically distorted. In such a case, turn off the power of the TV set/personal computer once, and after 15 to 30 minutes turn it on again. In the case of a personal computer, take appropriate measures such as data storage before turning off.

**On connection**  
When the system may be turned on automatically, the system may be turned on automatically by noise or an incoming call. This is caused by the system being magnetically shielded, the subwoofer is not, and there may be cases that the picture on some TV sets/personal computers may become magnetically distorted. In such a case, turn off the power of the TV set/personal computer once, and after 15 to 30 minutes turn it on again. In the case of a personal computer, take appropriate measures such as data storage before turning off.

**On connection**  
When the system may be turned on automatically, the system may be turned on automatically by noise or an incoming call. This is caused by the system being magnetically shielded, the subwoofer is not, and there may be cases that the picture on some TV sets/personal computers may become magnetically distorted. In such a case, turn off the power of the TV set/personal computer once, and after 15 to 30 minutes turn it on again. In the case of a personal computer, take appropriate measures such as data storage before turning off.

**On connection**  
When the system may be turned on automatically, the system may be turned on automatically by noise or an incoming call. This is caused by the system being magnetically shielded, the subwoofer is not, and there may be cases that the picture on some TV sets/personal computers may become magnetically distorted. In such a case, turn off the power of the TV set/personal computer once, and after 15 to 30 minutes turn it on again. In the case of a personal computer, take appropriate measures such as data storage before turning off.

**On connection**  
When the system may be turned on automatically, the system may be turned on automatically by noise or an incoming call. This is caused by the system being magnetically shielded, the subwoofer is not, and there may be cases that the picture on some TV sets/personal computers may become magnetically distorted. In such a case, turn off the power of the TV set/personal computer once, and after 15 to 30 minutes turn it on again. In the case of a personal computer, take appropriate measures such as data storage before turning off.

**On connection**  
When the system may be turned on automatically, the system may be turned on automatically by noise or an incoming call. This is caused by the system being magnetically shielded, the subwoofer is not, and there may be cases that the picture on some TV sets/personal computers may become magnetically distorted. In such a case, turn off the power of the TV set/personal computer once, and after 15 to 30 minutes turn it on again. In the case of a personal computer, take appropriate measures such as data storage before turning off.

**Power Sources (See Fig. [E])**

**Connect the AC power adaptor to the DC IN 12V jack.**

**Notes on the AC power adaptor**  
• Use only the supplied AC power adaptor. To avoid damaging the system, do not use any other AC power adaptor.

**Polarity of the plug**  
• Plug the AC power adaptor into a nearby AC Output. In the case of a problem, unplug from the AC outlet immediately.

**Do not place the AC power adaptor on a bookshelf or in a confined space, such as a cabinet.**

**To avoid fire or electric shock do not use the AC power adaptor in a place subject to liquid or moisture.**

**Furthermore, do not place liquid-filled vessels, such as vases, etc., on the AC power adaptor.**

**Hooking up the system (See Fig. [C])**

**1 Connect the satellite speakers (L/R) to the subwoofer.**

Either satellite speaker can be used for the right and left channels. When connecting to the speaker connected to the Rich Jack outputs the right channel sound, and the speaker connected to the Lch Jack outputs the left channel sound.

**2 Connect the system to a source device.**

Use the audio cable to connect. When the system is connected to the monoaural Jack of a source device

**Notes**  
• If the PC volume adjustment (master volume, WAV volume, etc.) is loud may be insufficient. If so, turn up the volume of the TV, refer to the operating instructions of the TV.

**Make sure the connection of the audio cable and the Jack of the source device is correct.**

**If connecting the system via a device with a built-in radio or tuner, radio broadcasts may be received.**

**Sensitivity may be reduced significantly, depending on the audio source or source device (PC, etc.) working.**

**The equipment or your ears may be damaged by excessive sound.**

**Reduce the volume of the source device (PC, etc.) and turn off the system when removing the audio cable from the source device.**

**Listening to the sound**

First, turn down the volume on this system. When connecting the system to the headphones output, turn down the volume of the source device.

**1 Press the  $\odot$  button to turn on.**  
The power indicator lights up.

**2 Start playback of the source device.**  
The sound begins to play.

**3 Adjust the volume.**  
VOLUME control: Adjusts the overall volume.  
BASS control: Adjusts the low tone of the subwoofer.

**4 Press the  $\odot$  button to turn off after use.**  
The power indicator goes off.

**To adjust the bass volume level**  
Press the  $\odot$  button in the ON position. Subwoofer to adjust the bass volume. Set the bass volume to an undistorted level to prevent system damage.

**Notes**  
• If the source device has a bass boost function or equalizer function, set it off. If not, set it to a flat position.  
• Although this system is designed to be used with a PC or a portable audio device, if the system volume and the bass volume are set high, the system may be damaged by the protection circuit, and it's not a malfunction. Turn down the volume and the bass volume during use.

**Turning the system on/off automatically**

**How the Auto Power function works**  
• This feature is only available when the  $\odot$  button is in the ON position.  
• If a signal is input, the system turns on automatically.

• If no signal is input for about 25 minutes or more\*, the system turns off automatically.

\* This may vary according to how the system is used.

**Notes**  
• If the input signal level is too low, the system will turn on automatically.  
• If a device that generates microwaves, such as a mobile phone, is nearby, the system may be turned on unintentionally by the device.

• If a mobile phone is connected to the system, the system may be turned on unintentionally by noise or an incoming call. This is caused by the system being magnetically shielded, the subwoofer is not, and there may be cases that the picture on some TV sets/personal computers may become magnetically distorted. In such a case, turn off the power of the TV set/personal computer once, and after 15 to 30 minutes turn it on again. In the case of a personal computer, take appropriate measures such as data storage before turning off.

**On connection**  
When the system may be turned on automatically, the system may be turned on automatically by noise or an incoming call. This is caused by the system being magnetically shielded, the subwoofer is not, and there may be cases that the picture on some TV sets/personal computers may become magnetically distorted. In such a case, turn off the power of the TV set/personal computer once, and after 15 to 30 minutes turn it on again. In the case of a personal computer, take appropriate measures such as data storage before turning off.

**On connection**  
When the system may be turned on automatically, the system may be turned on automatically by noise or an incoming call. This is caused by the system being magnetically shielded, the subwoofer is not, and there may be cases that the picture on some TV sets/personal computers may become magnetically distorted. In such a case, turn off the power of the TV set/personal computer once, and after 15 to 30 minutes turn it on again. In the case of a personal computer, take appropriate measures such as data storage before turning off.

**On connection**  
When the system may be turned on automatically, the system may be turned on automatically by noise or an incoming call. This is caused by the system being magnetically shielded, the subwoofer is not, and there may be cases that the picture on some TV sets/personal computers may become magnetically distorted. In such a case, turn off the power of the TV set/personal computer once, and after 15 to 30 minutes turn it on again. In the case of a personal computer, take appropriate measures such as data storage before turning off.

**On connection**  
When the system may be turned on automatically, the system may be turned on automatically by noise or an incoming call. This is caused by the system being magnetically shielded, the subwoofer is not, and there may be cases that the picture on some TV sets/personal computers may become magnetically distorted. In such a case, turn off the power of the TV set/personal computer once, and after 15 to 30 minutes turn it on again. In the case of a personal computer, take appropriate measures such as data storage before turning off.

**On connection**  
When the system may be turned on automatically, the system may be turned on automatically by noise or an incoming call. This is caused by the system being magnetically shielded, the subwoofer is not, and there may be cases that the picture on some TV sets/personal computers may become magnetically distorted. In such a case, turn off the power of the TV set/personal computer once, and after 15 to 30 minutes turn it on again. In the case of a personal computer, take appropriate measures such as data storage before turning off.

**Troubleshooting**

Should you experience any problems with your speaker system, check the following list and take the suggested measures. If the problem persists, consult your nearest Sony dealer.

**No sound**  
• Check that both this system and the source device are turned on.  
• Turn up the volume of the system.  
• Turn up the volume of the source device.  
• Check the separation of the speaker and volume adjustment. Refer to details on operating instructions supplied with this product.

**Distorted sound**  
• Turn down the volume of the source device as high as possible before the onset of distortion. For details on volume adjustment, refer to the operating instructions supplied with this product.

**Disconnection of the volume adjustment of your PC is set, cancel it.**

**Disconnect the audio cable from the system and the PC or source device; then, firmly reconnect the audio cable to the system's INPUT Jack and the headphone Jack (stereo mini jack) of the PC or source device.**

**Low sound level**  
• Turn up the volume of the source device as high as possible before the onset of distortion. For details on volume adjustment, refer to the operating instructions supplied with this product.

**Ensure that your PC sound balance is correct.**

**Disconnect the audio cable from the system and the PC or source device; then, firmly reconnect the audio cable to the system's INPUT Jack and the headphone Jack (stereo mini jack) of the PC or source device.**

**Distorted sound**  
• Turn down the volume of the source device as high as possible before the onset of distortion. For details on volume adjustment, refer to the operating instructions supplied with this product.

**If the source device has a bass boost function or equalizer function, set it off. If not, set it to a flat position.**

**Although this system is designed to be used with a PC or a portable audio device, if the system volume and the bass volume are set high, the system may be damaged by the protection circuit, and it's not a malfunction. Turn down the volume and the bass volume during use.**

**Turning the system on/off automatically**

**How the Auto Power function works**  
• This feature is only available when the  $\odot$  button is in the ON position.  
• If a signal is input, the system turns on automatically.

• If no signal is input for about 25 minutes or more\*, the system turns off automatically.

\* This may vary according to how the system is used.

**Notes**  
• If the input signal level is too low, the system will turn on automatically.  
• If a device that generates microwaves, such as a mobile phone, is nearby, the system may be turned on unintentionally by the device.

• If a mobile phone is connected to the system, the system may be turned on unintentionally by noise or an incoming call. This is caused by the system being magnetically shielded, the subwoofer is not, and there may be cases that the picture on some TV sets/personal computers may become magnetically distorted. In such a case, turn off the power of the TV set/personal computer once, and after 15 to 30 minutes turn it on again. In the case of a personal computer, take appropriate measures such as data storage before turning off.

**On connection**  
When the system may be turned on automatically, the system may be turned on automatically by noise or an incoming call. This is caused by the system being magnetically shielded, the subwoofer is not, and there may be cases that the picture on some TV sets/personal computers may become magnetically distorted. In such a case, turn off the power of the TV set/personal computer once, and after 15 to 30 minutes turn it on again. In the case of a personal computer, take appropriate measures such as data storage before turning off.

**On connection**  
When the system may be turned on automatically, the system may be turned on automatically by noise or an incoming call. This is caused by the system being magnetically shielded, the subwoofer is not, and there may be cases that the picture on some TV sets/personal computers may become magnetically distorted. In such a case, turn off the power of the TV set/personal computer once, and after 15 to 30 minutes turn it on again. In the case of a personal computer, take appropriate measures such as data storage before turning off.

**On connection**  
When the system may be turned on automatically, the system may be turned on automatically by noise or an incoming call. This is caused by the system being magnetically shielded, the subwoofer is not, and there may be cases that the picture on some TV sets/personal computers may become magnetically distorted. In such a case, turn off the power of the TV set/personal computer once, and after 15 to 30 minutes turn it on again. In the case of a personal computer, take appropriate measures such as data storage before turning off.

**On connection**  
When the system may be turned on automatically, the system may be turned on automatically by noise or an incoming call. This is caused by the system being magnetically shielded, the subwoofer is not, and there may be cases that the picture on some TV sets/personal computers may become magnetically distorted. In such a case, turn off the power of the TV set/personal computer once, and after 15 to 30 minutes turn it on again. In the case of a personal computer, take appropriate measures such as data storage before turning off.

**On connection**  
When the system may be turned on automatically, the system may be turned on automatically by noise or an incoming call. This is caused by the system being magnetically shielded, the subwoofer is not, and there may be cases that the picture on some TV sets/personal computers may become magnetically distorted. In such a case, turn off the power of the TV set/personal computer once, and after 15 to 30 minutes turn it on again. In the case of a personal computer, take appropriate measures such as data storage before turning off.

**On connection**  
When the system may be turned on automatically, the system may be turned on automatically by noise or an incoming call. This is caused by the system being magnetically shielded, the subwoofer is not, and there may be cases that the picture on some TV sets/personal computers may become magnetically distorted. In such a case, turn off the power of the TV set/personal computer once, and after 15 to 30 minutes turn it on again. In the case of a personal computer, take appropriate measures such as data storage before turning off.

**On connection**  
When the system may be turned on automatically, the system may be turned on automatically by noise or an incoming call. This is caused by the system being magnetically shielded, the subwoofer is not, and there may be cases that the picture on some TV sets/personal computers may become magnetically distorted. In such a case, turn off the power of the TV set/personal computer once, and after 15 to 30 minutes turn it on again. In the case of a personal computer, take appropriate measures such as data storage before turning off.

**On connection**  
When the system may be turned on automatically, the system may be turned on automatically by noise or an incoming call. This is caused by the system being magnetically shielded, the subwoofer is not, and there may be cases that the picture on some TV sets/personal computers may become magnetically distorted. In such a case, turn off the power of the TV set/personal computer once, and after 15 to 30 minutes turn it on again. In the case of a personal computer, take appropriate measures such as data storage before turning off.

**On connection**  
When the system may be turned on automatically, the system may be turned on automatically by noise or an incoming call. This is caused by the system being magnetically shielded, the subwoofer is not, and there may be cases that the picture on some TV sets/personal computers may become magnetically distorted. In such a case, turn off the power of the TV set/personal computer once, and after 15 to 30 minutes turn it on again. In the case of a personal computer, take appropriate measures such as data storage before turning off.

**On connection**  
When the system may be turned on automatically, the system may be turned on automatically by noise or an incoming call. This is caused by the system being magnetically shielded, the subwoofer is not, and there may be cases that the picture on some TV sets/personal computers may become magnetically distorted. In such a case, turn off the power of the TV set/personal computer once, and after 15 to 30 minutes turn it on again. In the case of a personal computer, take appropriate measures such as data storage before turning off.

**On connection**  
When the system may be turned on automatically, the system may be turned on automatically by noise or an incoming call. This is caused by the system being magnetically shielded, the subwoofer is not, and there may be cases that the picture on some TV sets/personal computers may become magnetically distorted. In such a case, turn off the power of the TV set/personal computer once, and after 15 to 30 minutes turn it on again. In the case of a personal computer, take appropriate measures such as data storage before turning off.

**On connection**  
When the system may be turned on automatically, the system may be turned on automatically by noise or an incoming call. This is caused by the system being magnetically shielded, the subwoofer is not, and there may be cases that the picture on some TV sets/personal computers may become magnetically distorted. In such a case, turn off the power of the TV set/personal computer once, and after 15 to 30 minutes turn it on again. In the case of a personal computer, take appropriate measures such as data storage before turning off.

**On connection**  
When the system may be turned on automatically, the system may be turned on automatically by noise or an incoming call. This is caused by the system being magnetically shielded, the subwoofer is not, and there may be cases that the picture on some TV sets/personal computers may become magnetically distorted. In such a case, turn off the power of the TV set/personal computer once, and after 15 to 30 minutes turn it on again. In the case of a personal computer, take appropriate measures such as data storage before turning off.

**On connection**  
When the system may be turned on automatically, the system may be turned on automatically by noise or an incoming call. This is caused by the system being magnetically shielded, the subwoofer is not, and there may be cases that the picture on some TV sets/personal computers may become magnetically distorted. In such a case, turn off the power of the TV set/personal computer once, and after 15 to 30 minutes turn it on again. In the case of a personal computer, take appropriate measures such as data storage before turning off.

**On connection**  
When the system may be turned on automatically, the system may be turned on automatically by noise or an incoming call. This is caused by the system being magnetically shielded, the subwoofer is not, and there may be cases that the picture on some TV sets/personal computers may become magnetically distorted. In such a case, turn off the power of the TV set/personal computer once, and after 15 to 30 minutes turn it on again. In the case of a personal computer, take appropriate measures such as data storage before turning off.

**On connection**  
When the system may be turned on automatically, the system may be turned on automatically by noise or an incoming call. This is caused by the system being magnetically shielded, the subwoofer is not, and there may be cases that the picture on some TV sets/personal computers may become magnetically distorted. In such a case, turn off the power of the TV set/personal computer once, and after 15 to 30 minutes turn it on again. In the case of a personal computer, take appropriate measures such as data storage before turning off.

**On connection**  
When the system may be turned on automatically, the system may be turned on automatically by noise or an incoming call. This is caused by the system being magnetically shielded, the subwoofer is not, and there may be cases that the picture on some TV sets/personal computers may become magnetically distorted. In such a case, turn off the power of the TV set/personal computer once, and after 15 to 30 minutes turn it on again. In the case of a personal computer, take appropriate measures such as data storage before turning off.

**On connection**  
When the system may be turned on automatically, the system may be turned on automatically by noise or an incoming call. This is caused by the system being magnetically shielded, the subwoofer is not, and there may be cases that the picture on some TV sets/personal computers may become magnetically distorted. In such a case, turn off the power of the TV set/personal computer once, and after 15 to 30 minutes turn it on again. In the case of a personal computer, take appropriate measures such as data storage before turning off.

**On connection**  
When the system may be turned on automatically, the system may be turned on automatically by noise or an incoming call. This is caused by the system being magnetically shielded, the subwoofer is not, and there may be cases that the picture on some TV sets/personal computers may become magnetically distorted. In such a case, turn off the power of the TV set/personal computer once, and after 15 to 30 minutes turn it on again. In the case of a personal computer, take appropriate measures such as data storage before turning off.

**Français**

Avant d'utiliser le système, lisez attentivement ce mode d'emploi et conservez-le pour le consulter à l'avenir.

**AVERTISSEMENT**  
Pour éviter les risques d'incendie ou d'électrocution, n'exposez pas cet appareil à la pluie ou à l'humidité.

Ne pas ouvrir le boîtier afin d'éviter tout choc électrique. Ne pas toucher la séparation de l'appareil et un technicien qualifié uniquement.

Pour éviter tout risque d'incendie, n'exposez pas cet appareil à la pluie ou à l'humidité.

Ne placez pas l'appareil dans un espace confiné, notamment dans un espace clos, des journaux, des magazines, des rideaux, etc.

Pour éviter tout risque d'incendie ou d'électrocution, n'exposez pas cet appareil aux éclaboussures et évitez de placer dessus des objets remplis de liquide, tels que des vases.

Ne placez pas l'appareil dans un espace confiné, notamment dans un espace clos, des journaux, des magazines, des rideaux, etc.

Pour éviter tout risque d'incendie ou d'électrocution, n'exposez pas cet appareil aux éclaboussures et évitez de placer dessus des objets remplis de liquide, tels que des vases.

Ne placez pas l'appareil dans un espace confiné, notamment dans un espace clos, des journaux, des magazines, des rideaux, etc.

Pour éviter tout risque d'incendie ou d'électrocution, n'exposez pas cet appareil aux éclaboussures et évitez de placer dessus des objets remplis de liquide, tels que des vases.

Ne placez pas l'appareil dans un espace confiné, notamment dans un espace clos, des journaux, des magazines, des rideaux, etc.

Pour éviter tout risque d'incendie ou d'électrocution, n'exposez pas cet appareil aux éclaboussures et évitez de placer dessus des objets remplis de liquide, tels que des vases.

Ne placez pas l'appareil dans un espace confiné, notamment dans un espace clos, des journaux, des magazines, des rideaux, etc.

Pour éviter tout risque d'incendie ou d'électrocution, n'exposez pas cet appareil aux éclaboussures et évitez de placer dessus des objets remplis de liquide, tels que des vases.

Ne placez pas l'appareil dans un espace confiné, notamment dans un espace clos, des journaux, des magazines, des rideaux, etc.

Pour éviter tout risque d'incendie ou d'électrocution, n'exposez pas cet appareil aux éclaboussures et évitez de placer dessus des objets remplis de liquide, tels que des vases.

Ne placez pas l'appareil dans un espace confiné, notamment dans un espace clos, des journaux, des magazines, des rideaux, etc.

Pour éviter tout risque d'incendie ou d'électrocution, n'exposez pas cet appareil aux éclaboussures et évitez de placer dessus des objets remplis de liquide, tels que des vases.

Ne placez pas l'appareil dans un espace confiné, notamment dans un espace clos, des journaux, des magazines, des rideaux, etc.

Pour éviter tout risque d'incendie ou d'électrocution, n'exposez pas cet appareil aux éclaboussures et évitez de placer dessus des objets remplis de liquide, tels que des vases.

Ne placez pas l'appareil dans un espace confiné, notamment dans un espace clos, des journaux, des magazines, des rideaux, etc.

Pour éviter tout risque d'incendie ou d'électrocution, n'exposez pas cet appareil aux éclaboussures et évitez de placer dessus des objets remplis de liquide, tels que des vases.

Ne placez pas l'appareil dans un espace confiné, notamment dans un espace clos, des journa

