



## Mini Hi-Fi component system

Brand	Code No. for each section				
	Receiver	CD	Tape	MD	
Kenwood	4015	5014	6015	–	
	4016	5015	6017	–	
	4016	5015	6018	–	
	4025	5034	6036	–	
	4025	5024	–	–	
	4071	5065	6064	7014	
	4071	5065	6065	–	
	4071	5065	6015	7014	
	4071	5065	6016	–	
	4082	5077	6074	7011	
	4083	5078	6075	7014	
	GoldStar/LG	4009	5007	6008	–
	Marantz	4017	5016	6019	–
4029		5039	6019	–	
Matsui	4094	5016	6050	–	
	4062	5058	6057	–	
	4060	5056	6057	–	
McIntosh	4077	5071	–	–	
	4097	5090	–	–	
Mission	4059	5055	6055	–	
Onkyo	4034	5035	6038	–	
	4034	5035	6039	–	
	4034	5030	6038	–	
	4034	5030	6039	–	
	4084	5079	6076	7015	
Panasonic	4008	5006	–	–	
	4008	5005	6067	–	
	4077	5072	6070	7010	
	4099	5094	–	–	
Philips	4017	5016	6019	–	
Pioneer	4006	5004	6006	–	
	4090	5028	6034	–	
	4018	5017	6020	–	
	4018	5017	6021	–	
	4006	5017	6006	–	
	4018	5017	6006	–	
	4072	5066	6066	–	
	4081	5076	6073	7016	
	Quadral	4049	5046	6048	–
		4049	5046	6049	–
RCA	4091	5080	6082	–	
	4091	5080	6083	–	
SABA	4041	5042	–	–	
Samsung	4042	5043	–	–	
Sansui	4087	5083	6077	–	

## Separate Components

Receiver/Amplifier	
Brand	Code No.
Sony	4001, 4002
Admiral	4095
Aiwa	4022, 4023, 4040, 4079
Akai	4074
B&O (Bang&Olufsen)	4068
Burmster	4053
Bush	4064, 4065
Carver	4048
Crown	4062
Daewoo	4005
Denon	4010, 4024, 4027, 4028, 4036, 4037
Finearts	4044
Goldstar/LG	4009
Goodmans	4061
Grundig	4075, 4021
Harman/Kardon	4035
JVC	4019, 4020, 4047, 4070, 4078, 4098
Kenwood	4015, 4016, 4025, 4071, 4082, 4083
Magnavox	4021
Marantz	4029, 4094, 4044
Matsui	4060, 4062, 4076
McIntosh	4097
Mission	4059
NAD	4103, 4033
Nakamichi	4104, 4087, 4086
Onkyo	4034, 4039, 4043, 4084
Panasonic	4008, 4077, 4099
Parasund	4066
Philips	4017
Pioneer	4006, 4018, 4032, 4072, 4081, 4085, 4090
Quadral	4049
RCA	4105, 4091, 4092, 4093
Rebox	4050
Rotel	4067
SABA	4041
Samsung	4042
Sansui	4086, 4087, 4089, 4038
Sanyo	4011
Sharp	4028, 4037, 4080, 4100
Sherwood	4012, 4013, 4031
Schneider	4004, 4069
Sounde-sign	4096
T+A	4063
Teac	4088

CD Player	
Brand	Code No.
Sony	5001, 5002, 5099, 5100, 5101
Admial	5085
Aiwa	5021, 5022, 5037, 5074
Akai	5068
B&O (Bang&Olufsen)	5063
Burmster	5049
Bush	5061
Carver	5045
Crown	5059
Daewoo	5003
Denon	5008, 5009, 5023, 5026
Emerson	5091
Fisher	5040
Goldstar/LG	5098, 5007
Goodmans	5057
Grundig	5020, 5069
Harman/Kardon	5031
Hitachi	5041
Jensen	5084
JVC	5018, 5019, 5033, 5073
Kenwood	5014, 5015, 5024, 5034, 5065, 5077, 5078
Magnavox	5016, 5026
Marantz	5071
Matsui	5056, 5058
McIntosh	5090
Mission	5055
NAD	5029
Nakamichi	5044, 5082
Onkyo	5030, 5035, 5038, 5079
Optimus	5092
Panasonic	5006, 5072, 5094
Philips	5016
Pioneer	5004, 5017, 5028, 5066, 5076
Quadral	5046
RCA	5080, 5081, 5088, 5089
SABA	5042
Samsung	5043
Sansui	5082, 5083, 5086
Sanyo	5010
Sharp	5075, 5095
Sherwood	5011, 5012, 5039
Schneider	5064
Sounde-sign	5087
T+A	5060

Analogue Cable Box	
Brand	Code No.
Hamlin/Regal	9022, 9023, 9024, 9025, 9026
Jerrold/G.I.	9044, 9001, 9002, 9003, 9004, 9005, 9006, 9007, 9008, 9018, 9043
NET	9042
Oak	9027, 9028, 9029
Panasonic	9019, 9020, 9021
Pioneer	9014, 9015
Scientific Atlanta	9009, 9010, 9011
Tocom	9016, 9017, 9043
Zenith	9012, 9013

Digital Cable Box	
Brand	Code No.
Sony	3101
Jerrold/G.I.	3103
Motorola	3103
Panasonic	3203
Philips	3104
Scientific Atlanta	3102

Cassette Deck	
Brand	Code No.
Sony	6001, 6025, 6005
Aiwa	6042, 6045, 6025
Denon	6028, 6029, 6009, 6010
Fisher	6011
GoldStar/LG	6008
Grundig	6051
Harman/Kardon	6033
JVC	6022, 6023, 6024
Kenwood	6036, 6037, 6015, 6016
Marantz	6047
Matsui	6041
Mission	6040
NAD	6031, 6032
Nakamichi	6079
Onkyo	6038, 6039, 6040, 6041, 6043, 6044
Panasonic	6067
Philips	6047
Pioneer	6034, 6035, 6020, 6021, 6006
Quadral	6034
RCA	6084, 6085
Sansui	6079, 6077, 6078
Sanyo	6011
Sharp	6028
Teac	6077, 6078, 6080, 6081
Technics	6046, 6007, 6067
Uher	6036, 6037
Universum	6038, 6039
Yamaha	6030, 6014

LD (Laser Disc)	
Brand	Code No.
Sony	0101, 0102, 0103, 0104
Hitachi	0108
Kenwood	0113, 0114
Magnavox	0110
Panasonic	0105, 0106, 0107
Philips	0115
Pioneer	0109
Sanyo	0112
Sharp	0111, 0116

DVD	
Brand	Code No.
Sony	0001, 0024, 0023, 0025
Aiwa	0015
Denon	0006, 0017
Harman/Kardon	0018
Hitachi	0008
JVC	0007
KLH	0010
Onkyo	0016
Panasonic	0002, 0006
Philips	0012
Pioneer	0021, 0019, 0004
RCA	0005
Sharp	0011
Shinco	0022
Samsung	0014
Sylvania	0020
Thomson	0013
Toshiba	0003
Yamaha	0006
Zenith	0009

MD Deck/DAT Deck	
Brand	Code No.
Sony	7001, 7002, 7019, 7020, 7101 (DAT)
Aiwa	7012
Akai	7018
Denon	7003
JVC	7008
Kenwood	7004, 7011, 7014
Marantz	7007
Onkyo	7015, 7102 (DAT)
Panasonic	7006, 7010
Pioneer	7016, 7102 (DAT)
Sansui	7009
Sharp	7013
Teac	7005
Yamaha	7017